

What to do if...
What to do if...



A tire punctures

P. 481 If you have a flat tire



The engine does not start

P. 490 If the engine will not start
P. 85 Engine immobilizer system
P. 498 If the vehicle battery is discharged



The shift lever cannot be moved out of P

P. 492 If the shift lever cannot be shifted from P



The engine coolant temperature gauge enters the red zone

P. 501 If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 493 If you lose your keys



The battery runs out

P. 498 If the vehicle battery is discharged



The doors cannot be locked

P. 43 Doors



The horn begins to sound

P. 87 Alarm



The vehicle is stuck in mud or sand

P. 504 If the vehicle becomes stuck



A warning light or indicator light comes on

P. 461

If a warning light turns on or a warning buzzer sounds...



nWarning lights



Brake system warning light

or



P. 461



Malfunction indicator lamp

or



P. 462



ABS warning light

or



P. 462



Driver's seat belt reminder light

P. 463



Front passenger's seat belt reminder light

P. 463



Low fuel level warning light

P. 463



Master warning light

P. 463



SRS warning light

P. 462



Electric power steering warning light

P. 462



Open door warning light

P. 463



Tire pressure warning light

P. 463



Charging system warning light

P. 462



Slip indicator

P. 462



A warning message is displayed

P. 470

If a warning message is displayed